
## Model "A" Lubrication Chart

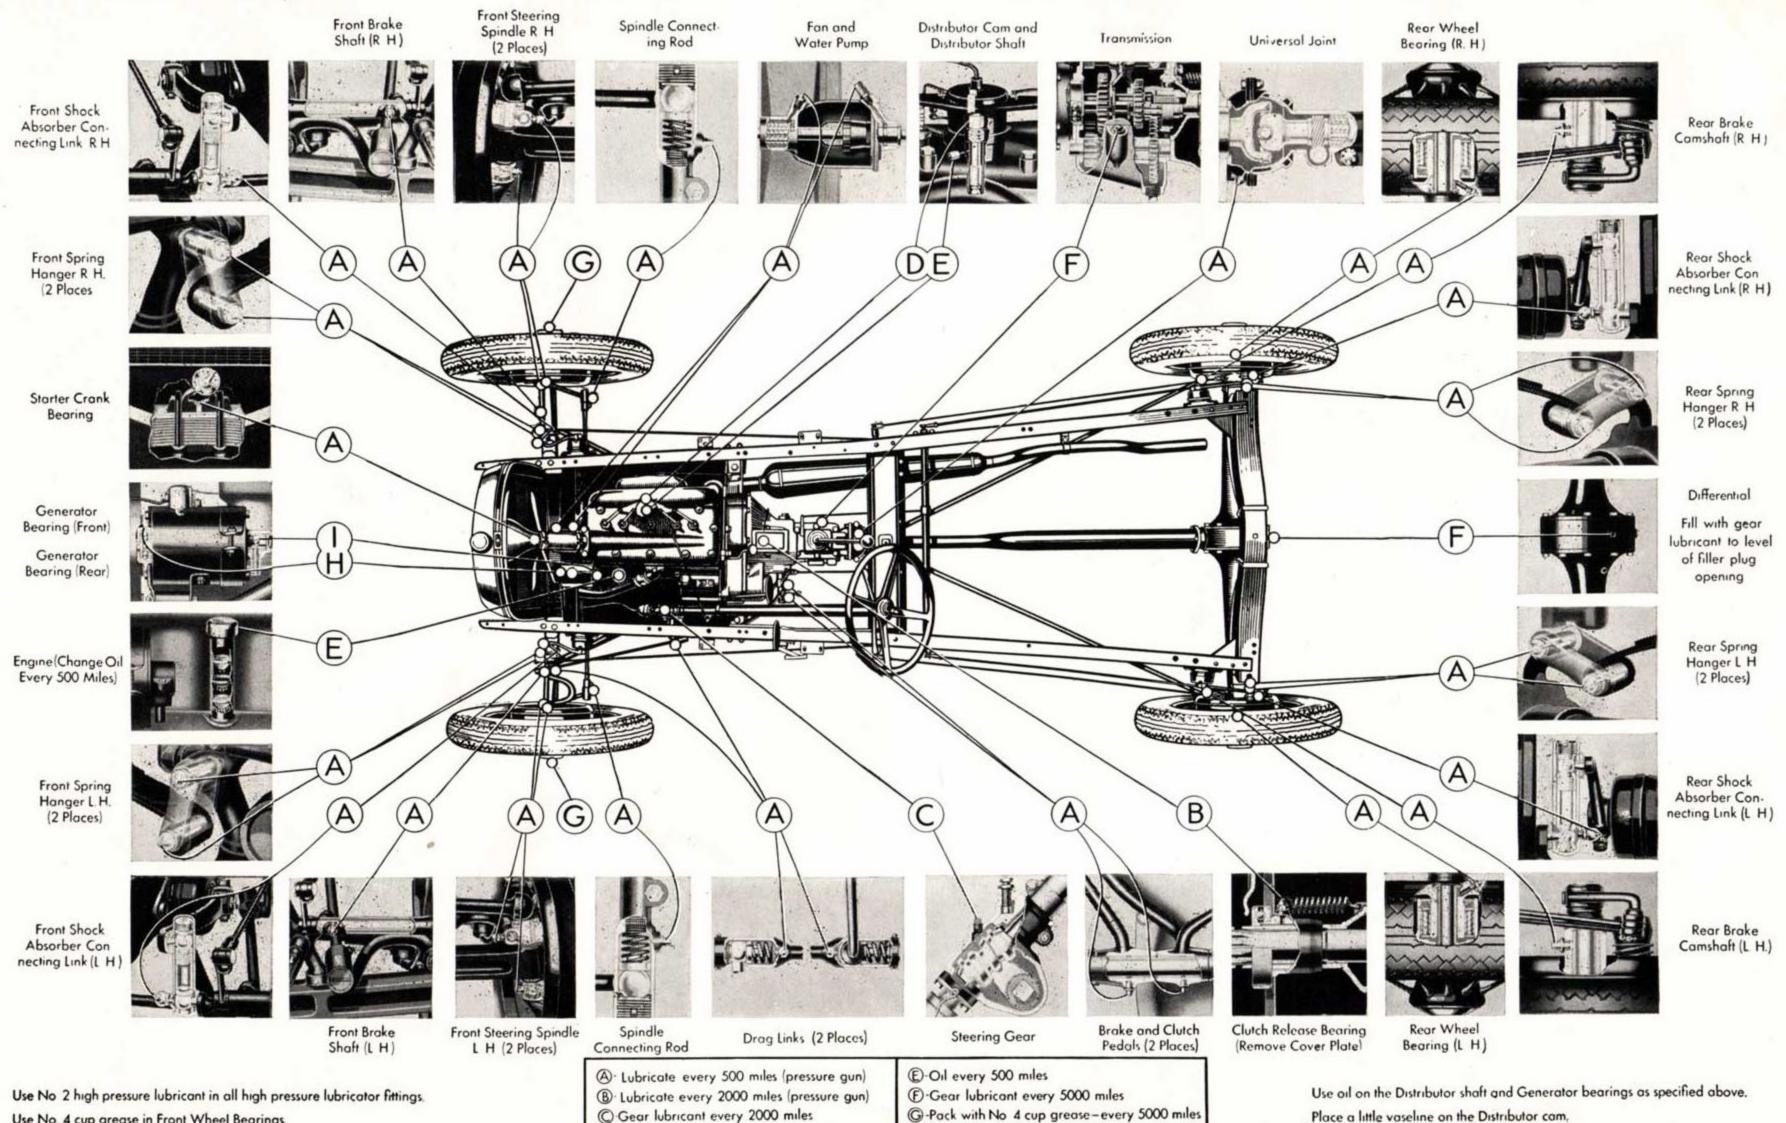

D Clean and apply light film of vaseline

every 2000 miles

(H)-2 or 3 drops of oil every 1000 miles

(1)-Fill oil cup every 2000 miles

Every 500 miles flow some oil through the oil hole in the starting crank bearing.

This lubricates the spring where it fits up in the cross member.

Use No. 4 cup grease in Front Wheel Bearings.

Transmission

Use good grade gear lubricant in the Steering gear, also in the Differential and